


Wrapping the Niddy Noddy




Begin by holding the end of the yarn against the center of the Niddy Noddy.

1. With the other hand, wrap the yarn around the end with the decorative upward curve.
2. Continue to the smooth end on the opposite brace.

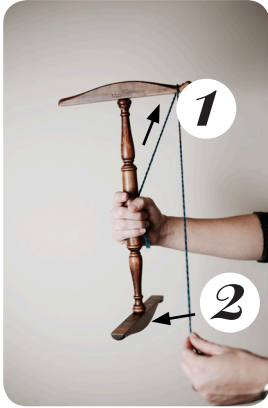

3. Carry the yarn back up to the top and around the other end of the top brace.

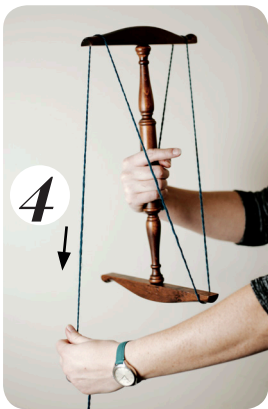

4. Bring the yarn down and around the last brace end.



5. Finally pass the yarn over the first end again. Continue to wrap in this order until all of your yarn has transferred to the Niddy Noddy.



Secure the yarn using a figure 8 tie in four places.



To remove yarn, slide it off a smooth end of the Niddy Noddy.

Kromski Niddy Noddys
are available in three sizes:

Large = 180 cm / 72 in.

Medium = 130 cm / 48 in.

Small = 76 cm / 30 in.



www.kromskina.com

www.kromski.com