



SONATA ENCORE


SPINNING WHEEL

ASSEMBLY INSTRUCTIONS




K R O M S K I & S O N S

WHEEL PARTS

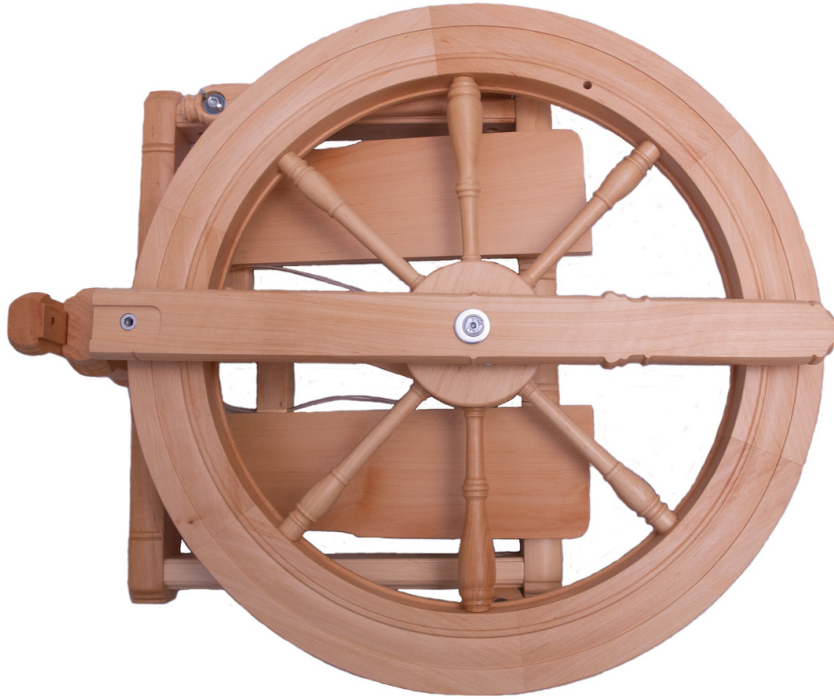

PRE-ASSEMBLED
WHEEL

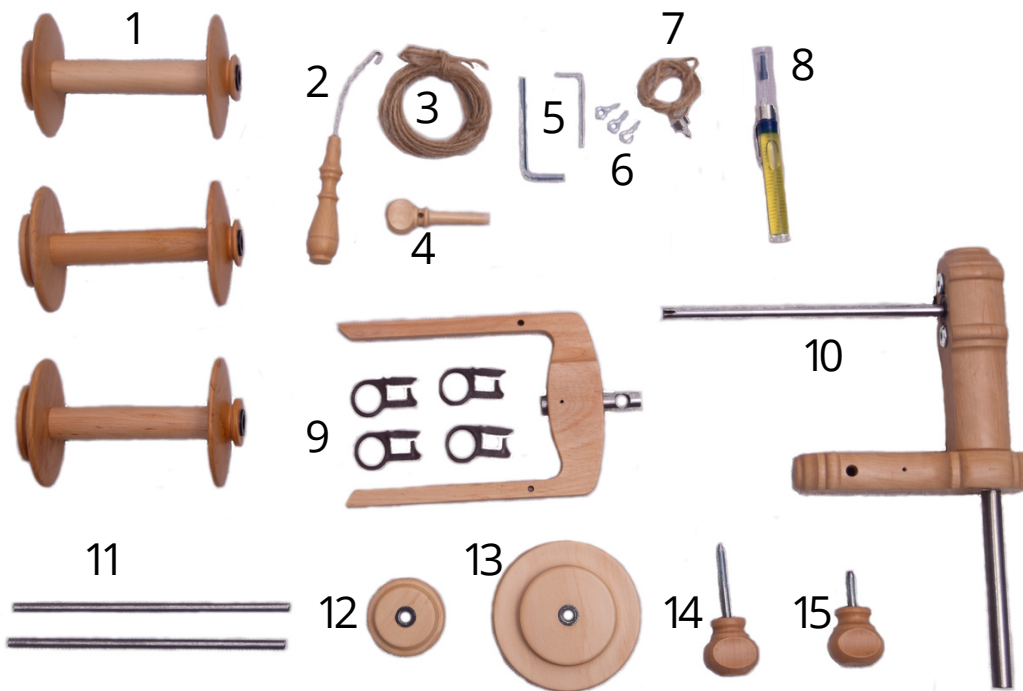

- 1- BOBBINS (3)
- 2- HOOK
- 3- DOUBLE DRIVE BAND
- 4- SMALL THUMB PEG
- 5- HEX WRENCHES (2)
- 6- EYE SCREWS (3)
- 7- STRING AND SPRING (SCOTCH TENSION)
- 8- OIL PEN

- 9- FLYER AND 4 PLASTIC HOOKS
- 10- FLYER HEAD
- 11- METAL RODS FOR LAZY KATE
- 12- STANDARD FAST WHORL
- 13- STANDARD SLOW WHORL
- 14- LONGER KNOB (FOR THE WHEEL)
- 15- SHORTER KNOB (FOR THE MOTHER-OF-ALL)






GENTLY LIFT AND HOLD WHEEL TO THE UPRIGHT POSITION AND SECURE IT BY LONGER KNOB AT THE REAR BASE OF THE WHEEL POST

PLACE FLYER HEAD METAL ROD INSIDE THE TOP THE WHEEL POST, FRONT TOWARD TREADLES.

LOCK IT USING THE SECOND SHORT KNOB.

PREPARE WHORL:
LOOSEN SMALL SCREW ON METAL INSERT UNTIL THERE IS NO PROTRUSION INSIDE THE INSERT, BUT DO NOT FULLY REMOVE.

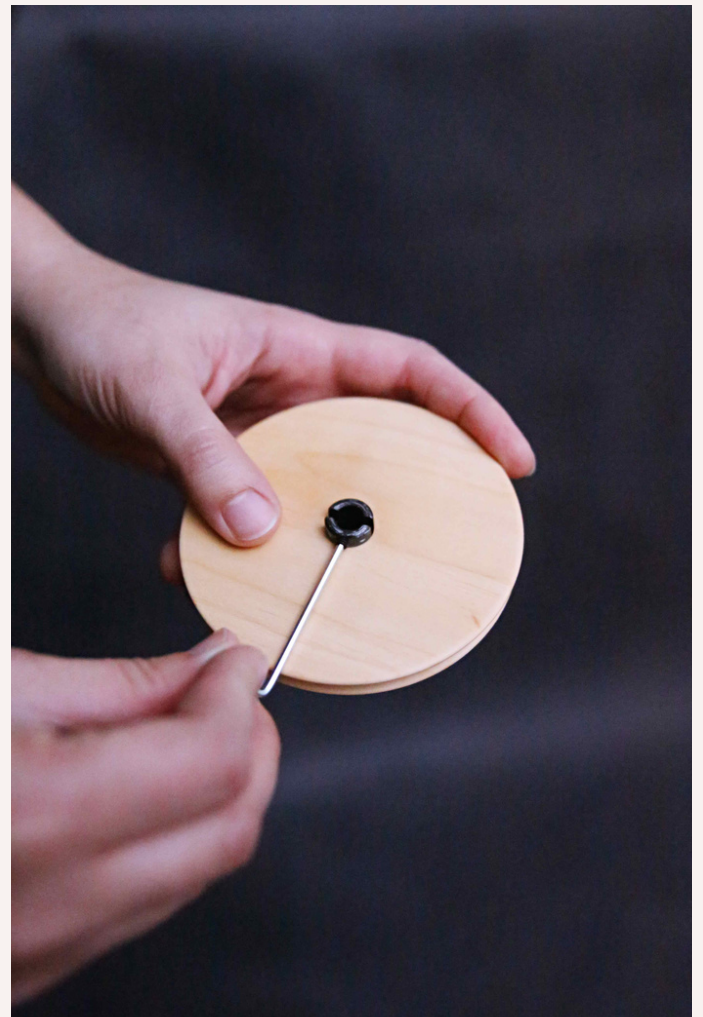

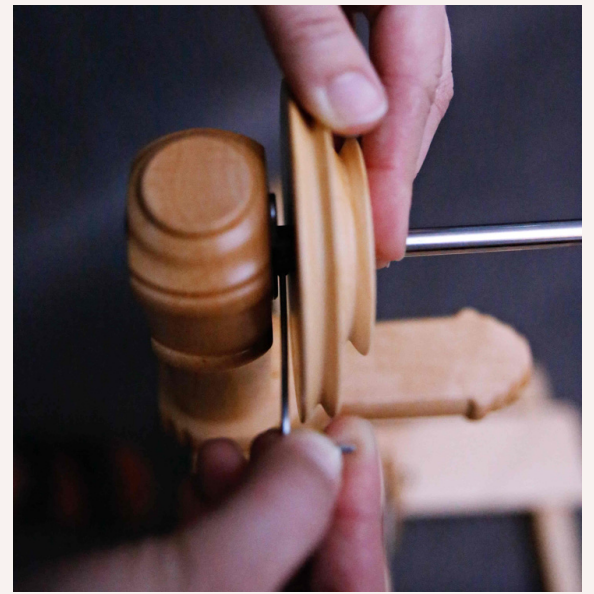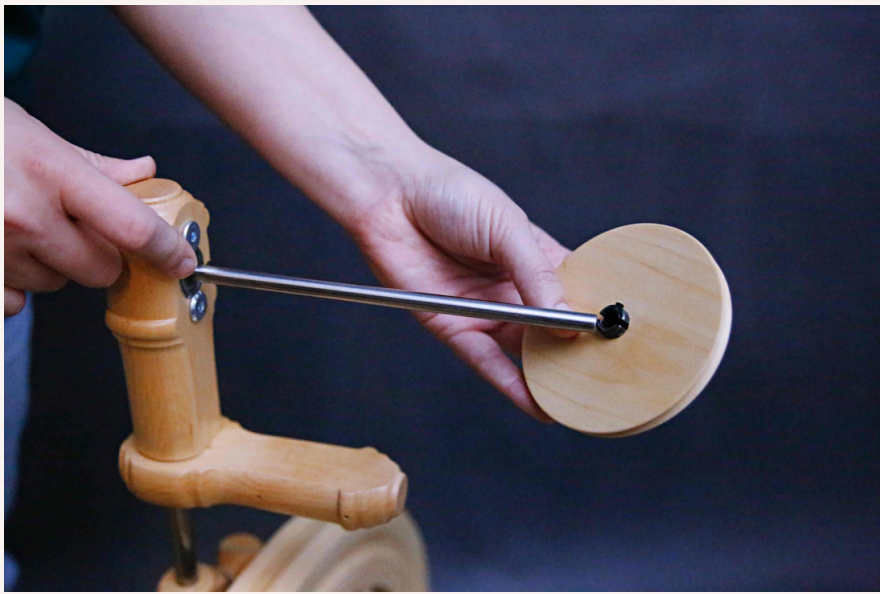

SLIP A WHORL ON THE SPINDLE WITH THE SLOTTED BACK SIDE GOING FIRST.

PUSH TO THE REAR OF THE SPINDLE AND ENGAGE THE WHORL SLOT WITH THE PIN AND TIGHTEN THE SCREW TO SECURE IN PLACE.

NOW PUT A BOBBIN ON THE SPINDLE (BIGGER GROOVE ON THE BACK).




SLIP THE FLYER ONTO THE END OF THE SPINDLE WHILE ROTATING IT. YOU WILL FEEL THE SPINDLE AND THE FLYER PULL TOGETHER BY THE FORCE OF THE MAGNETS AND LOCK INTO POSITION.





ATTACH OPEN EYE SCREW TO THE SCOTCH TENSION ARM, SO YOU CAN EASILY REMOVE THE SPRING AND THE BAND FROM THE EYE TO MAKE ADJUSTMENTS FOR SPINNING AND PLYING.

THE SCOTCH TENSION BRAKE BAND IS ADJUSTED WITH A SMALL THUMB PEG.

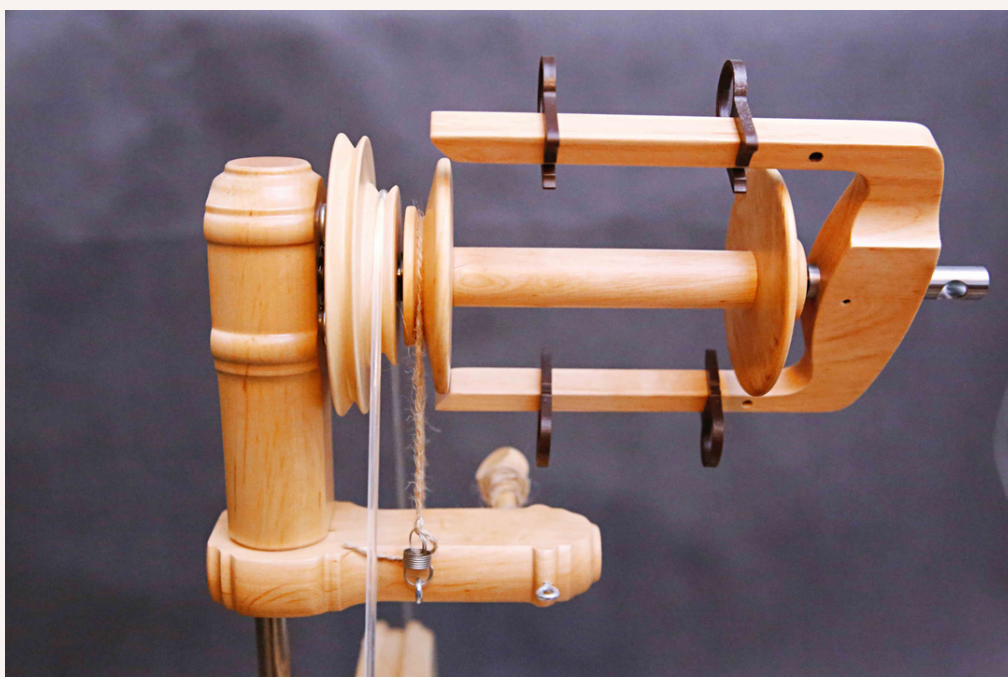


PLACE THE BRAKE ON THE BIGGER GROOVE OF THE BOBBIN.

THE FRONT EYE
SCREW CAN BE
USED TO HANG
YOUR THREADING
HOOK.




INSTALLING THE ONBOARD
LAZY KATE.

THE SONATA IS NOW READY
FOR SPINNING.

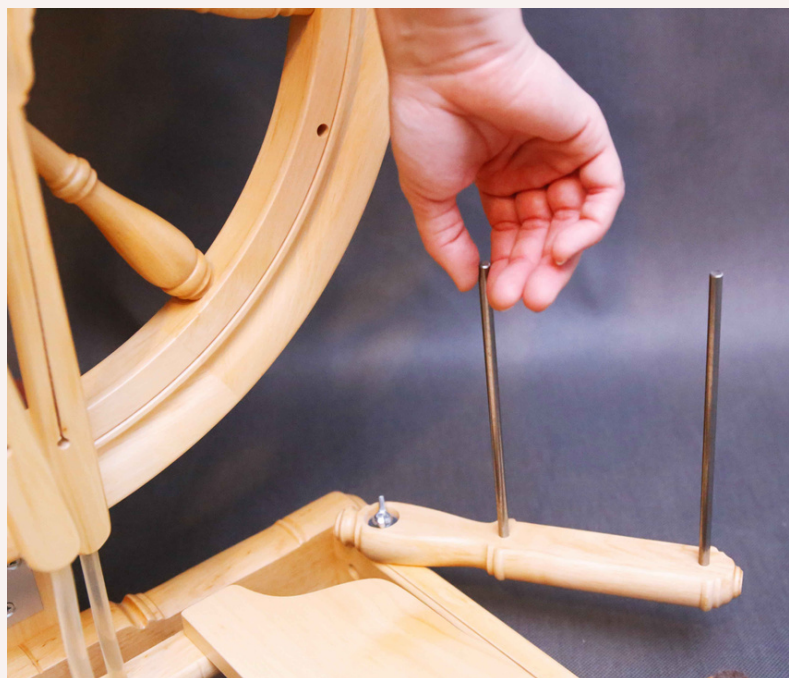


MAINTAINANCE POINTS

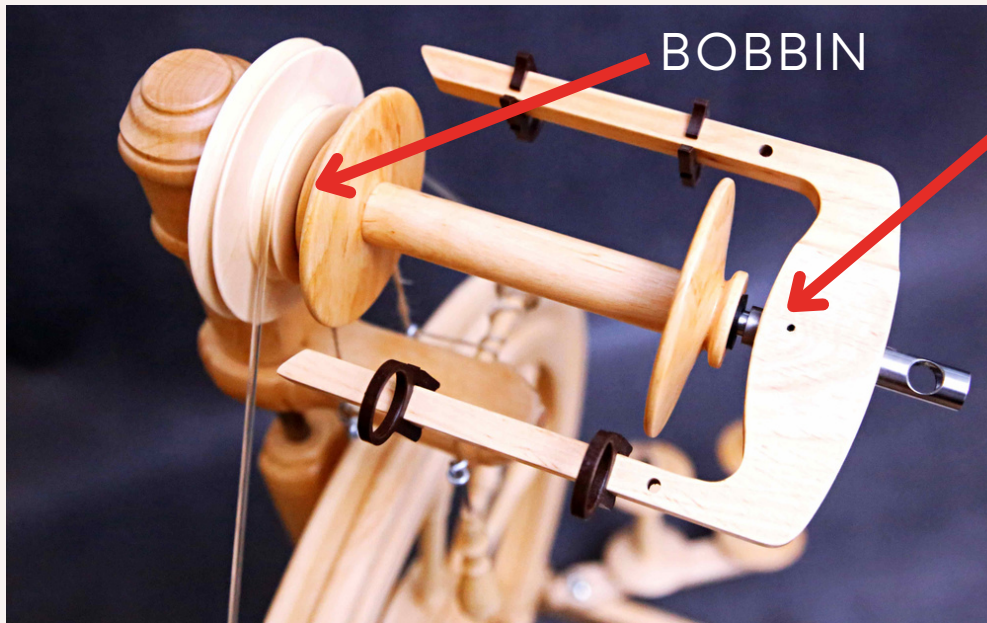

BOBBIN


HOLE FOR OIL
SPINDLE

FOR
LUBRICATE
OIL

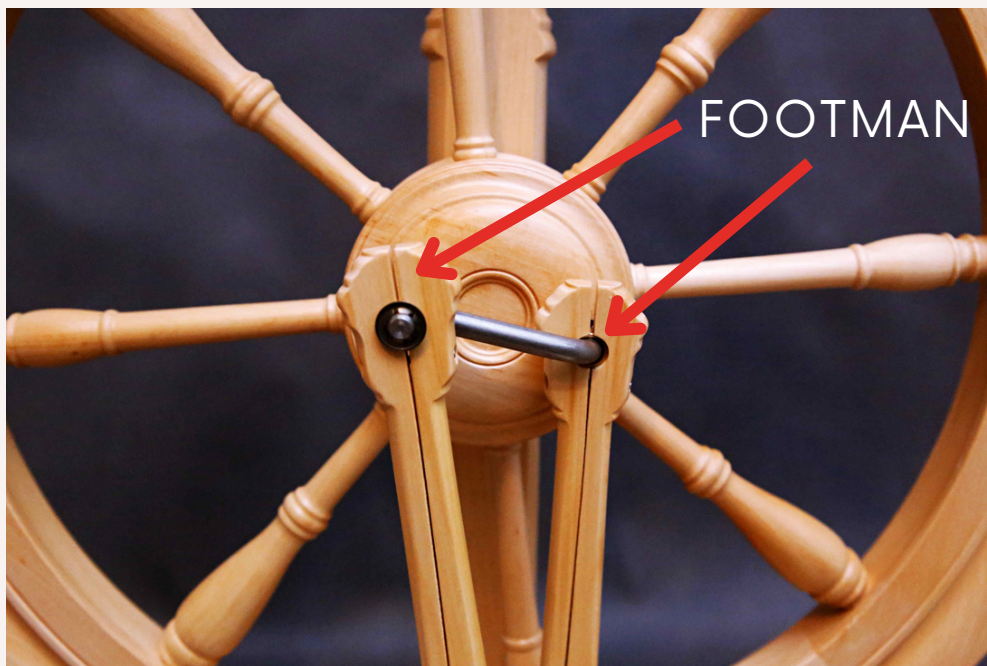


FOOTMAN

WAX - NO
OIL!

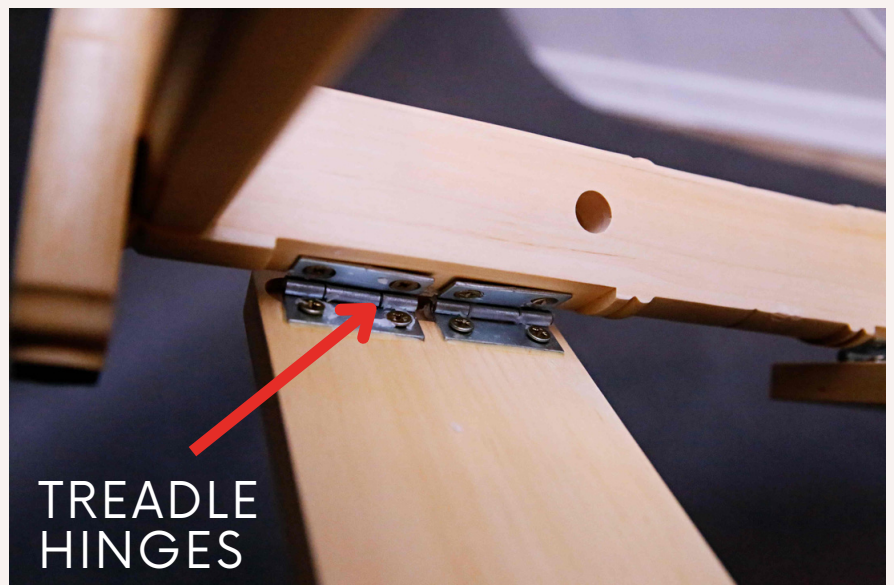

TREADLE
HINGES

FOLDING SONATA

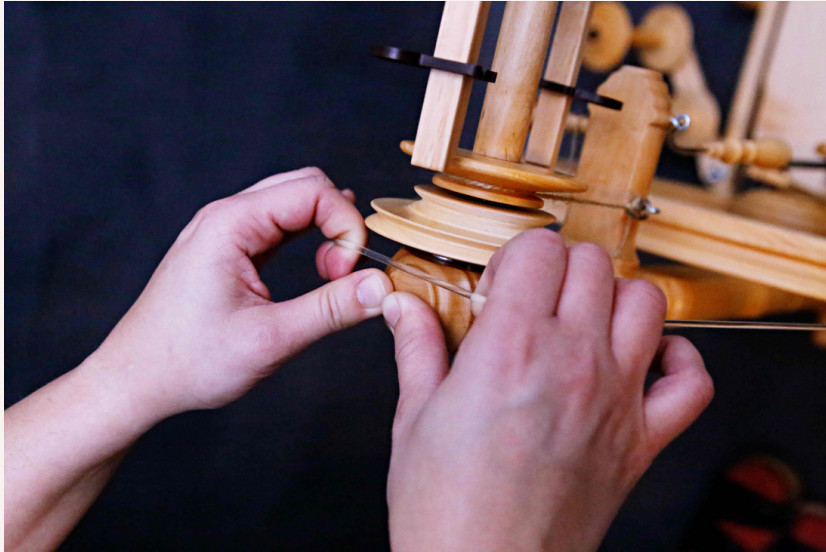


TAKE OFF THE DRIVE BAND FROM THE WHORL.

REMOVE THE MOTHER-OF-ALL FROM THE WHEEL POST AND SET ASIDE.



STRAIGHTEN LAZY KATE ALONG THE FRAME.


REMOVE LOCKING KNOB AT THE REAR BASE OF THE WHEEL POST WHILE YOU HOLD THE WHEEL POST IN AN UPRIGHT POSITION.

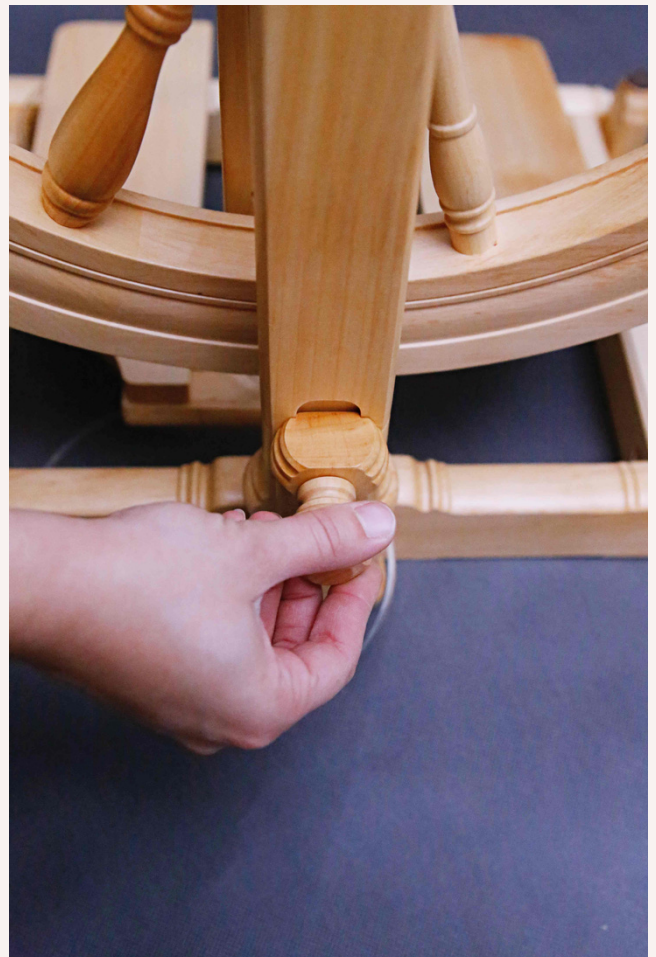




WITH KNOB REMOVED, GENTLY LOWER THE WHEEL ONTO THE TREADLES AND FLOOR FRAME AS YOU POSITION THE HOLE IN THE WHEEL RIM OVER THE RIGHT SIDE SUPPORT POST (THESE 2 POSTS HAVE FELT ON THE TOP).

INSERT THE KNOB THROUGH THE HOLE IN THE RIM AND INTO THE RIGHT POST. TIGHTEN SO THE WHEEL IS SNUG.

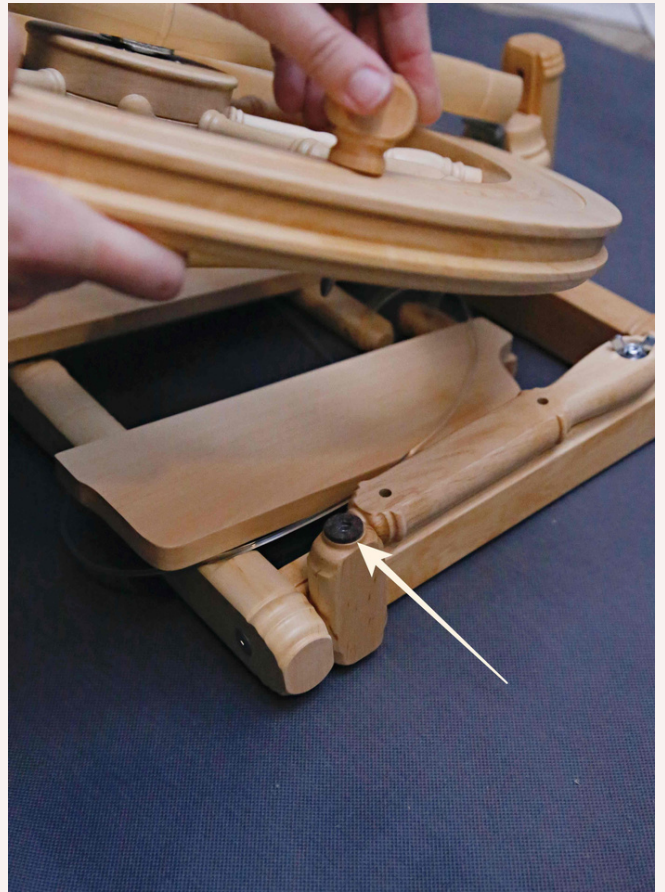


THE MOTHER-OF-ALL CAN BE STOWED ON THE FOLDED WHEEL.

ON FRONT OF THE FLOOR FRAME IS A HOLE SO YOU CAN SLIP IN THE MOTHER-OF-ALL METAL POST.

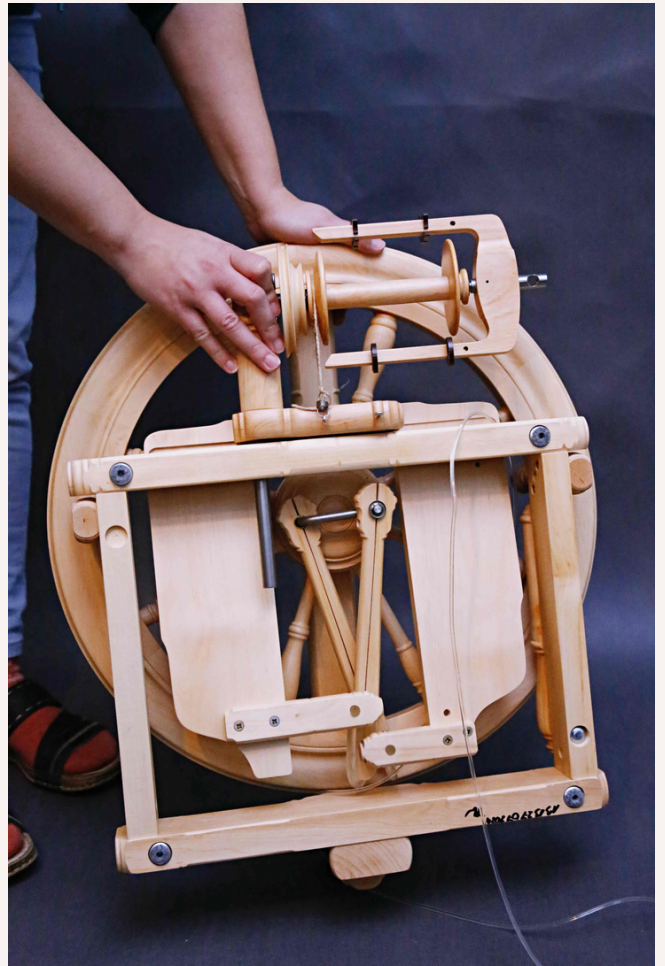

PLACE METAL RODS OF
THE LAZY KATE IN
POCKET INSIDE THE
BAG.

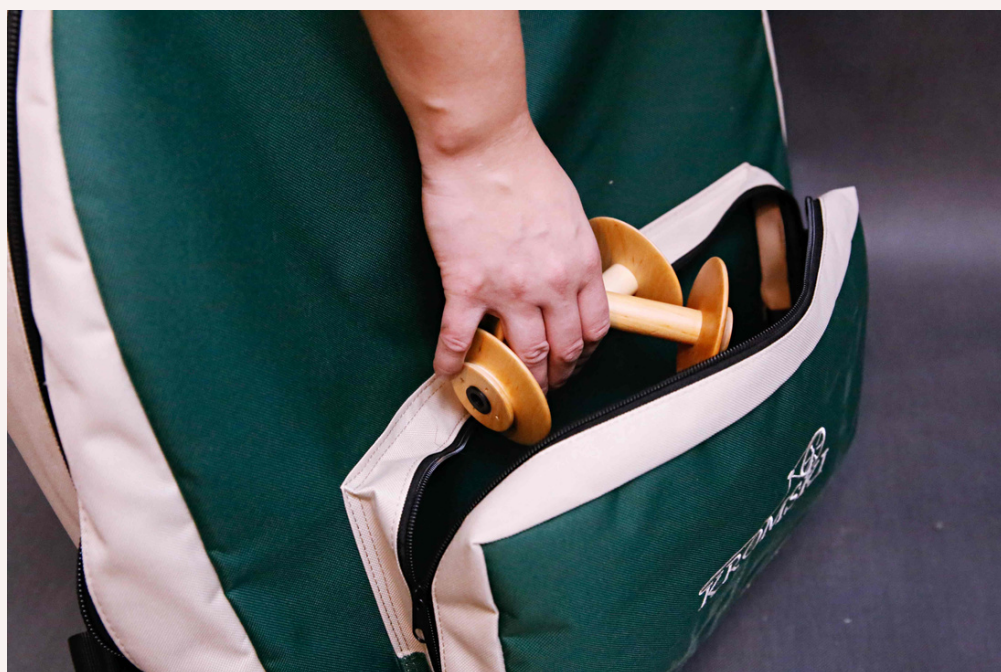

PUT BOBBINS INSIDE
THE FRONT POCKET.

PLACE THE SONATA
WITH MOTHER-OF-ALL
INSIDE THE BAG.



ACCESSORIES FOR SONATA

SLOW
WHORL



STANDARD
WHORL



FAST
WHORL



EXTRA FAST
WHORL



JUMBO ORIFICE
SET



JUMBO FLYER
SET



TRADITIONAL
MOTHER-OF-ALL



LARGE
NIDDY NODDY



HAND
CARDERDS



BOBBINS



SEE MORE: KROMSKI.COM

K R O M S K I & S O N S

what's new



COLORFUL
ACCESSORIES



NEW
PREMIUM
MERINO
WOOL



FANTASIA
BLACK
& ECO



KROMSKI & SONS
www.kromski.com | [@kromskiandsons](https://www.instagram.com/kromskiandsons)
www.kromskina.com | info@kromski.com



DISCOVER
OUR ARTISANAL
NEWSLETTER WITH
FREE TUTORIALS

